



XM0817

BLOWER MOTOR - RENEW

Action	Ref. Detail	Special Instructions
Disconnect	earth lead ← battery	
Remove	closing panel ← below glovebox	2 off turnbuckles
Disconnect	1. multiplugs ← motor sockets	
Remove	2. hose ← motor and housing	
"	3. bolts ← motor bracket	3 off
"	4. motor ← housing	▲ CAUTION: Do not damage fan, ease from housing
Check	5. seal	For deterioration, renew if necessary
Reassemble	components	
Test	motor	See Fault Diagnosis Manual